

NOTES:

- 1) STRAW MUST BE ANCHORED DOWN BY ONE OF THE FOLLOWING METHODS:
 - A) CRIMPING, DISKING, ROLLING, OR PUNCHING INTO THE SOIL.
 - B) COVERING WITH NETTING.
 - C) SPRAYING WITH A CHEMICAL OR FIBER BINDER (TACKIFIER).
 - D) MOISTENING


(NOT TO SCALE)



Pierce County

Department of Public Works and Utilities
 Transportation Services
 2401 South 35th Street Room 150
 Tacoma, Washington 98409-7485

DATE	REVISIONS	APPROVED	DRAWN

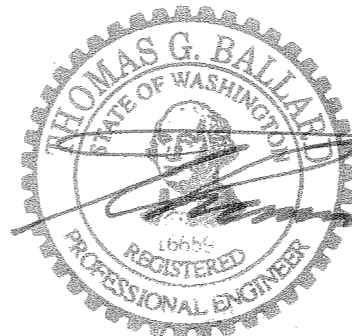

THOMAS G. BALLARD, P.E.
COUNTY ENGINEER

Thomas G. Ballard
 MAY 1, 1997

Office of County Engineer

STRAW MULCH

PC.M2.3